PARTS LIST

for



ELECTRIC DRYER

MODEL LE6150XSW1

▲W-White, N-Almond



FOR CUSTOMER SATISFACTION ALWAYS USE FACTORY SPECIFICATION PARTS




Whirlpool CORPORATION
Benton Harbor, Michigan.

© 1992 WHIRLPOOL CORPORATION

CABINET PARTS

For Model: LE6150XSW1

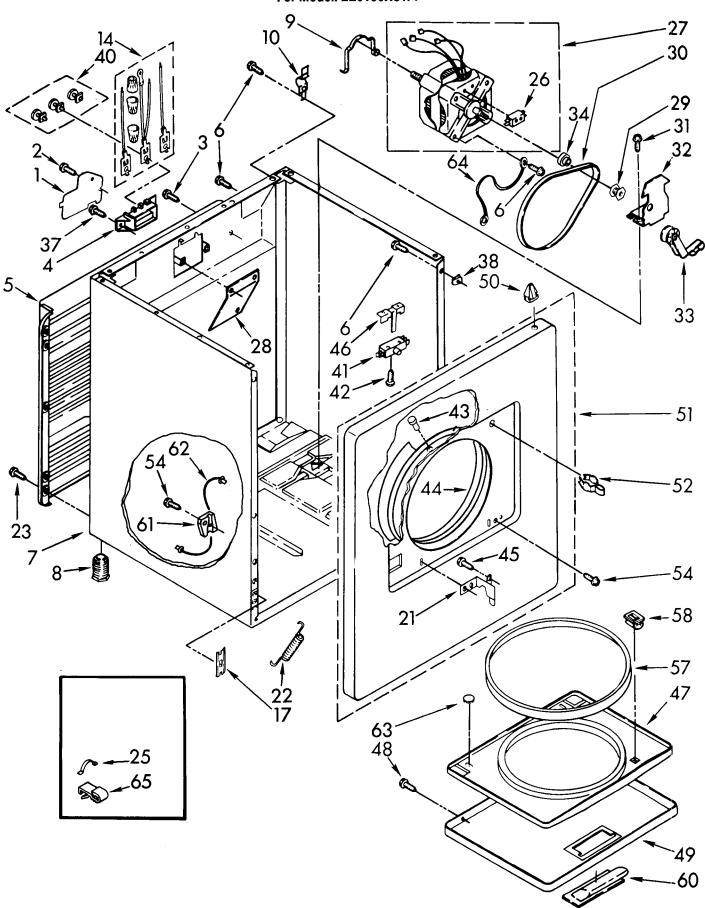


3394558

```
1
                   Cover, Terminal Block
      690893
2
                   Screw, Hex Washer Head
      693995
3
      697776
                   Screw, 10-32 X 1/2 (External Ground)
4
      690261
                   Block, Terminal
                   Panel, Rear
5
      346368
6
      343641
                   Screw, 10-16 X 1/2
7
                   Cabinet
      3394109
                   White
      3394110
                   Almond
8
      3392100
                   Foot, Dryer
9
      660658
                   Clamp, Motor
      343481
                   (Alt.)
      685441
                   (Alt.)
10
      238088
                   Hinge, Top (2)
      279318
                   Terminal, Brass & Tinned
14
17
      3394083
                   Clip (2)
21
      238456
                   Hinge, Door (R.H.)
      238460
                   Hinge, Door (L.H.)
22
      337186
                   Spring, Door (2)
23
      693994
                   Screw, Hex Washer Head
25
      98997
                   Clip, Harness
      3388235
                   Switch (Use W/3391888 Motor)
26
                   Motor, 60 Hz.
27
      3391888
                   Shield, Light
28
      690262
                   Pulley, Motor
29
      3389627
30
      660996
                   Belt, Drive
31
      172455
                   Bolt, 5/16-18 X 3/4
32
      348780
                   Base, Motor
                   Ideler & Pulley
33
      691366
34
      3393657
                   Restrainer, Belt
37
      3393008
                   Screw, 10-16 \times 1/2
38
      98234
                   Clip, Ground (2)
                   Terminal Block Kit (For Terminal Block)
40
      279393
      344475
                   Switch, Door
41
42
      98129
                   Screw, 6-20 \times 7/8 (2)
                   Clip, Felt Pad
43
      685203
44
      349462
                   Seal & Bearing
                   Screw, 8-15 X 1/2
45
      688160
46
      691581
                   Lever, Door Switch
47
      695953
                   Door, Rear
                   Screw, Mounting
48
      694091
49
                   Door, Front
      348737
                   White
      689485
                   Almond
50
      690363
                   Lock, Front Top
51
                   Front Panel
                   White
      337464
      689525
                   Almond
52
                   Strike, Door
      696144
54
      339493
                   Screw, Hinge To Panel (4)
57
      685763
                   Seal, Door
58
      690081
                   Catch, Door
60
                   Handle, Door
      690270
                   White
      690271
                   Almond
61
      337182
                   Guide, Cable (L.H.)
      337183
                   Guide, Cable (R.H.)
```

62	230131	Cable, Door (2)
63	660975	Button, Plug (2)
64	690236	Wire, Ground (Motor)
65	689180	Clip, Harness (Door Switch Leads)

TOP AND CONSOLE PARTS

For Model: LE6150XSW1

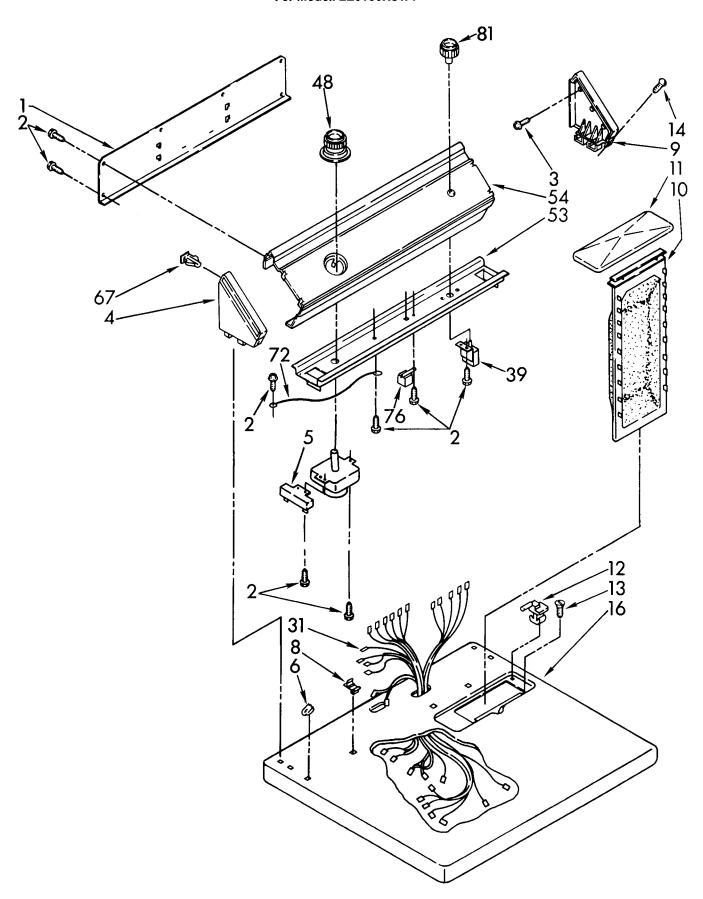


```
386367
1
                 Panel, Rear Console
                  Screw, 10-16 \times 1/2
2
      343641
                  Screw, 13-16 \times 5/8
3
      355326
                 Cap, End (L.H.)
4
     63789
5
     3388706
                  Resistor, Timer
6
     358473
                 Stop, Push-In
8
     358472
                  Nut, Push-In (2)
9
     63795
                  Cap, End (R.H.)
                  Screen, Lint
10
     339392
11
                  Cover, Lint Screen
      688150
                  White
      689310
                 Almond
12
      339229
                  Hinge, R.H.
     339230
                  Hinge, L.H.
13
     688983
                  Screw, 8-18 \times 5/8
14
      64211
                  Screw, End Cap
16
                  Top
      3393385
                  White
      3393386
                 Almond
21
     3395492
                 Timer, 60 HZ.
31
     3395488
                  Harness, Wiring
39
                  Switch, Push-To-Start
     660936
      346364
                  (Alt.)
      692021
                  (Alt.)
48
     3387904
                  Timer Knob & Dial Assembly
                Bracket, Control
53
     3394061
54
     3387982
                 Panel, Control
     689559
                  Nut, Push-In (4)
67
72
                  Wire, Ground
     690853
76
      694419
                  Buzzer
      3388054
                  Knob, Push To Start
LITERATURE AND OPTIONAL PARTS
LITERATURE PARTS
     LIT3387179 Guide, Dryer
      LIT3395414 Use & Care Guide
      LIT3389444 Instructions, Installation
     LIT3394558 List, Service Parts
OPTIONAL PARTS NOT INCLUDED
PAINTS
PAINT, TOUCH UP (1/2 oz.)
      72017
                  White
      72107
                  Almond
PAINT PRESSURIZED SPRAY (13 oz.)
      350930
                 White
      350956
                  Almond
                  Primer, Gray
      350938
      350941
                  Leveler (Thinner)
PAINT, BULK (1 qt.)
      799344
                 White (Uncut)
```

Almond (Uncut)

978883

BULKHEAD PARTS

For Model: LE6150XSW1

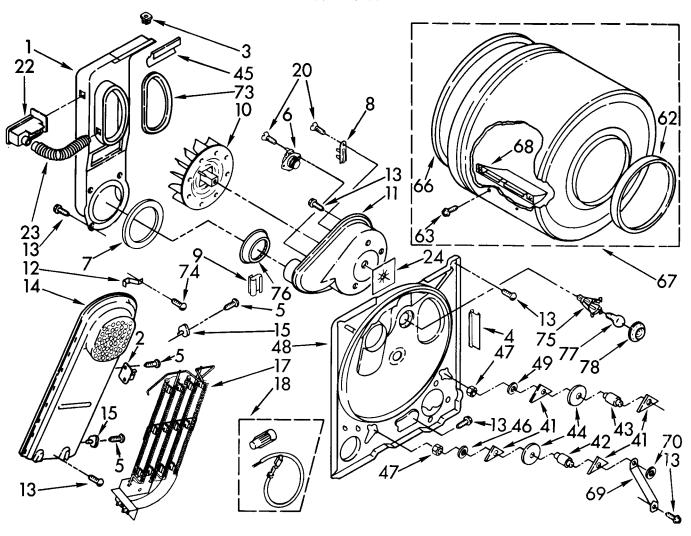

3394558 6

```
1
                   Lint Chute Assembly
      686215
2
      3389946
                   Thermal, Cutoff
3
      98460
                   Nut, Push-In (2)
4
      686889
                   Pad, Cabinet
5
      90767
                   Screw, 8 \times 3/8
6
      3387134
                   Thermostat, Internal-Bias
7
      347139
                   Seal, Lint Chute 150~F (66~C) (341146) (Alt.)
8
      3392519
                   Thermal Fuse
9
      3392247
                   Pad, Blower Housing
10
      694089
                   Wheel, Blower
11
      695081
                   Housing, Blower
12
      337272
                   Clip
13
      343641
                   Screw, 10-16 \times 1/2
14
      695547
                   Box, Heater
15
      3390291
                   Thermostat, 250~F (121.1~C) (High Limit)
17
                   Element, Heater (For 240 Volt Installation)
      660982
      693300
                   (Alt.)
      693298
                   (Alt.)
      693062
                   (Alt.)
18
      279457
                   Wire Kit (For Heater Element Wiring Harness Repair)
20
      695239
                   Screw, 8-18 \times 3/8
                   Alert, Lint
22
      690981
                   Hose, Differential
23
      686577
                   Seal, Blower Shaft
24
      3392123
      690997
                   Ring, Tri
41
42
      347364
                   Shaft, L.H.
43
      339489
                   Shaft, R.H.
44
      3389901
                   Roller, Support
45
      686770
                   Support Protector
46
      348197
                   Washer, Support
47
                   Nut, 3/8-16
      120377
48
      685776
                   Bulkhead
                   Washer, Support
49
      3388703
62
      3394508
                   Ring, Bearing
63
      690372
                   Screw, 11-16 \times 7/8
                   Seal, Rear Drum
66
      337449
67
      695584
                   Drum Assembly
      342847
68
                   Baffle, Drum
      348945
                   Bracket, Support
69
70
      90296
                   Clip
73
      339956
                   Seal
74
      687128
                   Screw, 10-16 \times 1/2
                   Socket, Light
75
      691034
                   Shield, Exhaust
76
      696302
77
      311255
                   Bulb, Light
78
      341165
                   Lens, Light
```